MIDMARK®

Installation Instructions

Dressing Nook and Instrument Panel

Unpacking Notes

- **Concealed Damage.** If there should be damage of such nature that it could not be detected until the goods were unpacked, have the Transportation Company's Agent come AT ONCE and inspect them. Require them to give you a "concealed" bad order report stating the condition of the goods when examined. It is their duty to do this and you should INSIST upon it.

- **If the Above Instructions are Complied With**, we shall cheerfully render all possible assistance in establishing claims against the Transportation Company for loss and damage in transit.

- **We Do Not Accept Goods Returned For Credit, Exchange, Repairs**, or for any other reason, unless you have first communicated with us and secured our written permission.

Installation

NOTE
The Dressing Nook and Instrument Panel are mounted to the wall using steel mounting brackets (provided with units). Wall anchors and drywall screws are also provided to secure the mounting brackets to the wall. Figures 1 thru 5 are suggested mounting configurations and locations only.

1. Using the customer or room layout drawing, determine where the Dressing Nook and / or Instrument Panel are to be located. See Figure 1 for the suggested room layout.

2. Check clearance required for placing a side chair beside the Dressing Nook. A minimum of 24 in. (61 cm) is required for the 129 / 429 Side Chair. See Figure 2.

NOTE
If the locations of the units differ from what is shown in Figures 2, then bracket locations shown in Figure 3 must be changed accordingly.

3. Measure and mark the mounting locations of the mounting brackets on the wall. See Figure 3.

4. Locate and mark the location of studs in reference to mounting brackets. An electronic stud finder may be used.

NOTE
This note applies to steps 5 thru 7. When securing mounting brackets to a wall with metal studs, use sheet metal screws in place of drywall screws and when securing mounting brackets to a masonary / concrete block wall, use masonary screws in place of drywall screws and wall anchors.

5a. DRESSING NOOK - Place mounting brackets in position on wall and mark the locations of all fasteners. Remove the mounting brackets and drill a 3/8 in. hole where all wall anchors are to be used; three holes per mounting bracket if a wall stud is not located and two holes per mounting bracket if a wall stud is located.

5b. INSTRUMENT PANEL - Place a mounting bracket in position on wall and mark the locations of all fasteners. Remove the mounting bracket and drill a 3/8 in. hole where all wall anchors are to be used; four holes per mounting bracket if a wall stud is not located and three holes per mounting bracket if a wall stud is located.

6. Install a wall anchor in each hole. Install a screw in each wall anchor and tighten far enough to secure the wall anchor in place. Then, remove all screws from the wall anchors.

7. Attach mounting brackets to the wall using wall anchor screws. Level each mounting bracket before securing to the wall.

8. Test each mounting bracket for strength.

9. Mount instruments to the Instrument Panel using 3/4 in. (1.9 cm) long wood screws. See Figures 4 and 5 for suggested instrument locations.

10. Lift the Instrument Panel onto the mounting brackets.

11. Mark locations of notches in bottom of Dressing Nook. Remove Nook from wall and install wall anchors as required. Refer to Step 5a and 6).

12. Lift the Dressing Nook onto the top mounting brackets. Attach bottom of Nook to wall with appropriate fasteners.

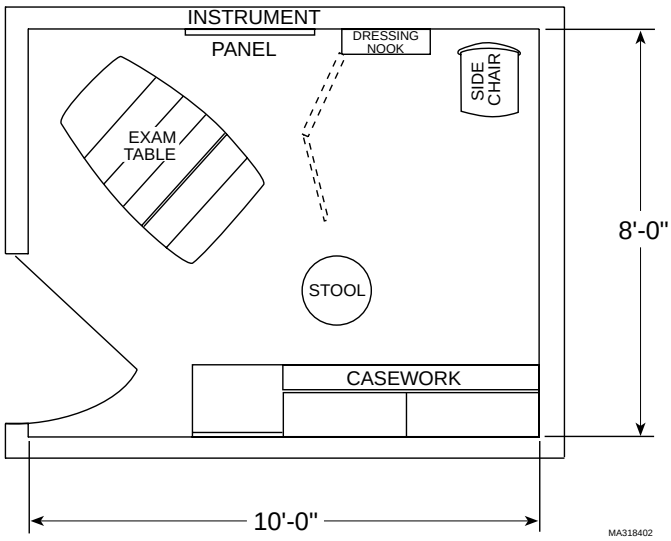

FIGURE 1. SUGGESTED ROOM LAYOUT

© Midmark Corporation - 1999

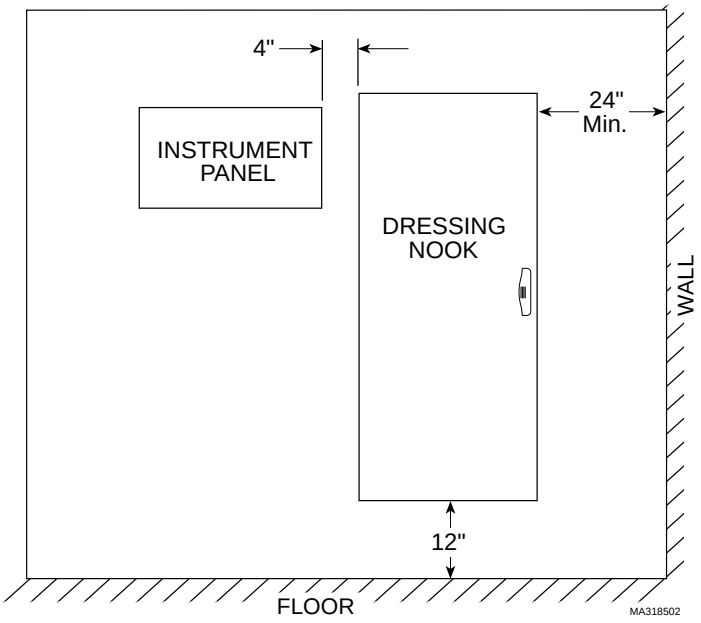

FIGURE 2. DRESSING NOOK / INSTRUMENT PANEL POSITIONING ON WALL

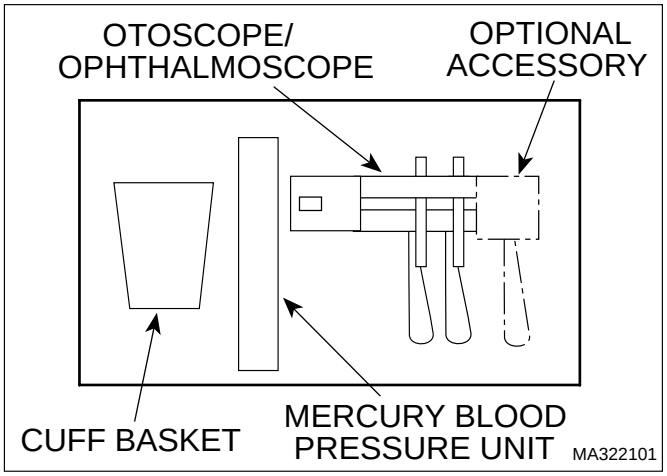

FIGURE 4. SUGGESTED INSTRUMENT LOCATION FOR A 34" X 19" INSTRUMENT PANEL

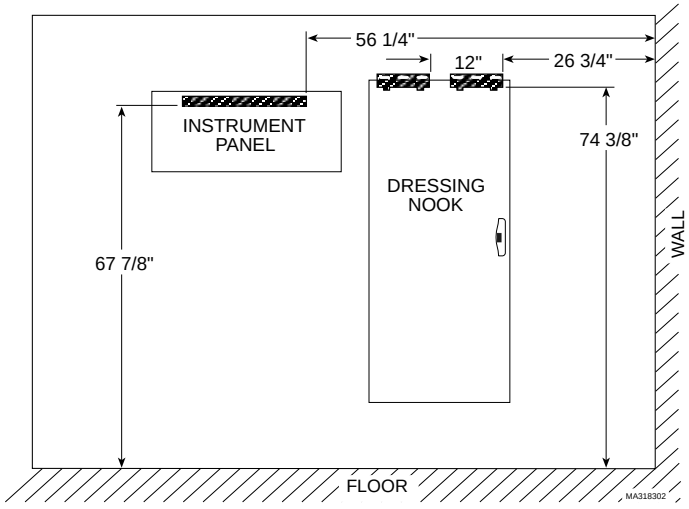

FIGURE 3. MOUNTING BRACKET POSITIONING ON WALL

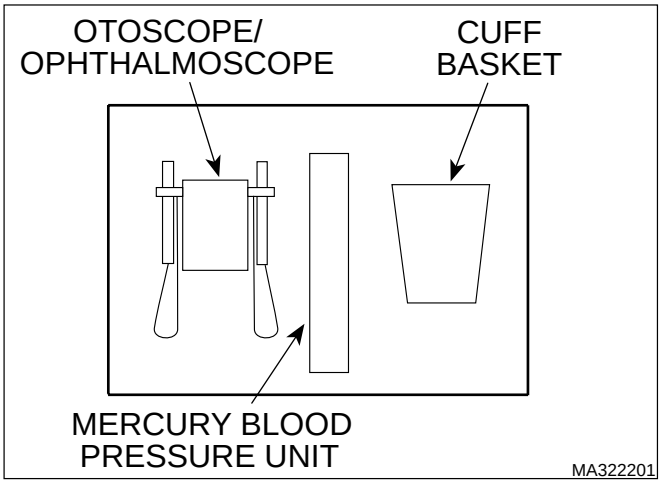

FIGURE 5. SUGGESTED INSTRUMENT LOCATION FOR A 30" X 19" INSTRUMENT PANEL

MIDMARK®

Midmark Corporation, Versailles, Ohio 45380 U.S.A.
937-526-3662 TELEX 288007 FAX 937-526-5542

© Midmark Corporation - 1999